



## WEARDECK™ GLAS-POWERED™ LUMBER INSTALLATION TIPS



### Directional Lines

A raised line runs end to end on one side of each board. When installing, ensure all directional lines face the same direction for a uniform deck.




### Screw Lines and Markings

DO NOT USE PENCIL ON WEARDECK™. Use a blue chalk line or a blue wax-coated carpenter pencil. Red chalk is not advised and difficult to remove.



### Screws

Stainless Steel Composite Deck Screws are recommended. They resist rust and use reverse threading.




### Minimum Screw Lengths

2.5" screws for 5/4 x 8"  
1.5" screws for 1/2 x 6", 1/2 x 10"



### Minimum Spacing

End to end: 1/16"  
(3/16" recommended)  
Side to side: 1/16"  
(3/16" recommended)



### Cutting

Chop Saw: 40T Blade  
Jig Saw: 14 TPI Carbide



## WEARDECK™ GLAS-POWERED™ LUMBER MAINTENANCE TIPS



### Basic Maintenance

For regular cleaning, sweep or brush away dirt and debris. Use a pressure cleaner or soap, water, and a scrub brush.



### Pressure Washing

Begin 18 inches away from the deck surface with a pressure washer. Move closer using best judgement after testing a small, inconspicuous area first.




### Tougher Marks

Spray the affected area with a cleaning solution like Simple Green® or Soft Scrub®. Let cleaners sit for a few minutes then scrub or pressure wash the area.



### Rust

Use a liquid rust remover to remove rust marks from boards.

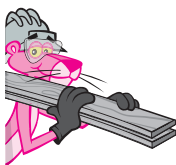

## HOW WE BUILD NOW™

### FANTASTIC IMAGES DISTRIBUTING, LLC

3161 Hadley Rd  
Metamora, MI 48455  
(248) 821-8242

<https://fantasticimagesdistributing.com>